FIRESTOP CENTRE

Authorised New Zealand Distributor Ph (09) 483 4000 www.firestopcentre.co.nz AGNI-Wrap in a Shaftwall (min 41mm) PEX Pipe 25mm Max FRR -/60/60

System ID# FC218

Step-by-step installation instructions:

- 1. Ensure the aperture is free from dust and debris.
- Insert one revolution of AGNI-Wrap 50 into the annular gap each side of the wall leaving approx 12mm protruding outside the shaftwall.
- 3. Apply AGNI-Black between AGNI-Wrap 50 and the pipe, finishing flush with the protruding AGNI-Wrap 50.
- 4. Apply 12mm x 12mm AGNI-Black fillet/cone between AGNI-Wrap and the wall.

Technical Information	
Substrate	 Min. 25mm Shaftliner & 16mm fire-rated plasterboard wall (Shaftwall system)
Service range	DN25mm PEX pipe
Annular gap	12.3 - 18.7mm
AGNI-Products	AGNI-Wrap 50, AGNI-Black
Protection installation	From both sides of the wall

Compliance information	
Standards	AS1530.4-2014, AS4072.1-2005
FRR/FRL	-/60/60
Reference	PF24146

Agnitek

8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au


Date

07.03.2025

Disclaimer

Agnitek reserves the right to modify product specifications without prior notice due to its ongoing research, development & certification programme. The information in this document is provided in good faith and is intended for guidance purposes only. Any accompanying drawings are solely for illustrative purposes. Since Agnitek cannot oversee installation methods or ensure site conditions, no warranties, expressed or implied, are intended regarding the products' actual performance. We do not accept liability for any loss, damage, or injury from using this information. Please take a look at the test reports displayed on a relevant AGNI-System webpage for all compliance specifics.

Page 1 of 2

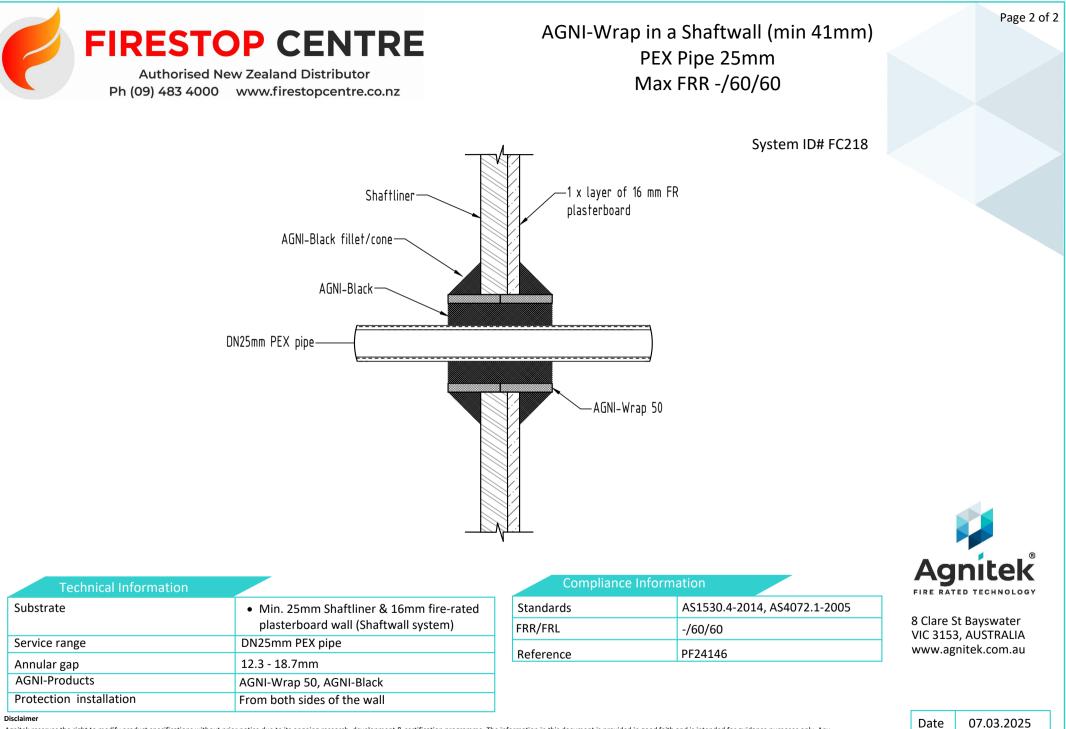

Agnitek reserves the right to modify product specifications without prior notice due to its ongoing research, development & certification programme. The information in this document is provided in good faith and is intended for guidance purposes only. Any accompanying drawings are solely for illustrative purposes. Since Agnitek cannot oversee installation methods or ensure site conditions, no warranties, expressed or implied, are intended regarding the products' actual performance. We do not accept liability for any loss, damage, or injury from using this information. Please take a look at the test reports displayed on a relevant AGNI-System webpage for all compliance specifics.