FIRESTOP CENTRE

Authorised New Zealand Distributor Ph (09) 483 4000 www.firestopcentre.co.nz

Step-by-step installation instructions:

- 1. Ensure the aperture is free from dust and debris.
- Insert one revolution of AGNI-Wrap 50 into the annular gap each side of the wall leaving approx 12mm protruding outside the Hebel panel.
- 3. Apply AGNI-Black between AGNI-Wrap 50 and the pipe, finishing flush with the protruding AGNI-Wrap 50.
- 4. Apply 12mm x 12mm AGNI-Black fillet/cone between AGNI-Wrap and the wall.

AGNI-Wrap in a Shaftwall (min 41mm) Pair Coil (PE or FR) with Cable and Pipe Max FRR -/60/60

System ID# FC219

Technical Information		
Substrate	Min. 25mm Shaftliner & 16mm fire-rated	Sta
	plasterboard wall (Shaftwall system)	FRI
Service range	PE/FR Pair Coil + TPS Cable + 20mm	Re
	Condensate Pipe	
Annular gap	FR - 8.3 - 37.5.6mm	
	PE - 8.2 - 27.3mm	
AGNI-Products	AGNI-Wrap 50, AGNI-Black	
Protection installation	From both sides of the wall	1

Complia	nce Inti	ormat	non
Compila		urnau	.101

Standards	AS1530.4-2014, AS4072.1-2005
FRR/FRL	FR -/60/60
Reference	PF24146




8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au

Disclaimer

Agnitek reserves the right to modify product specifications without prior notice due to its ongoing research, development & certification programme. The information in this document is provided in good faith and is intended for guidance purposes only. Any accompanying drawings are solely for illustrative purposes. Since Agnitek cannot oversee installation methods or ensure site conditions, no warranties, expressed or implied, are intended regarding the products' actual performance. We do not accept liability for any loss, damage, or injury from using this information. Please the test reports displayed on a relevant AGNI-System webpage for all compliance specifics.

Date 07.03.2025

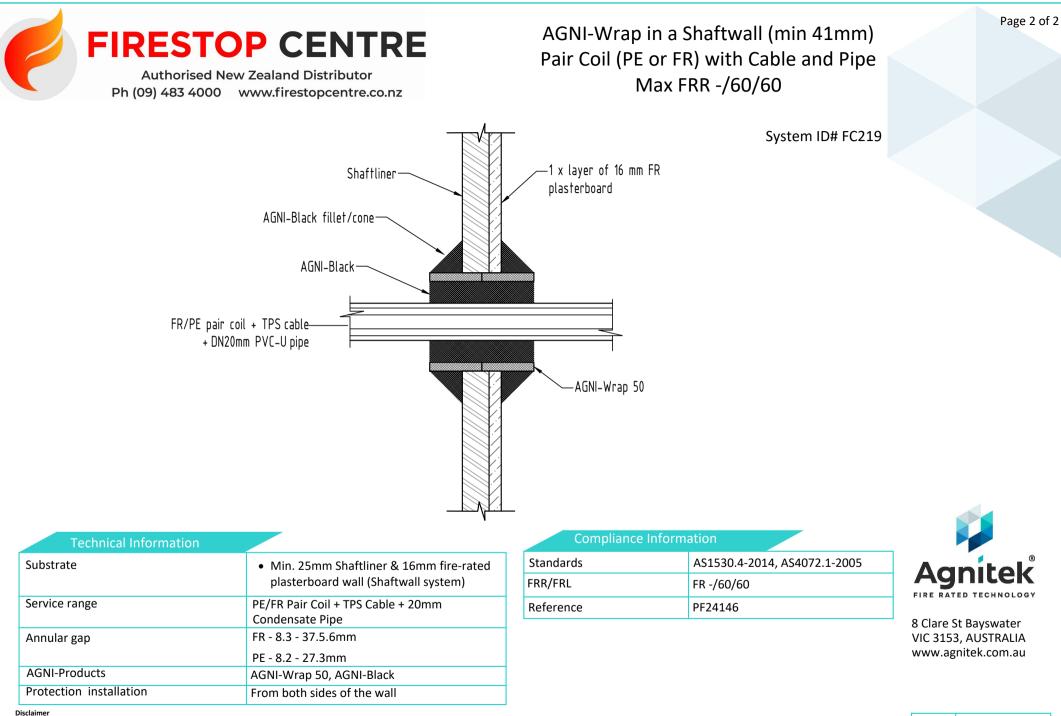

Agnitek reserves the right to modify product specifications without prior notice due to its ongoing research, development & certification programme. The information in this document is provided in good faith and is intended for guidance purposes only. Any accompanying drawings are solely for illustrative purposes. Since Agnitek cannot oversee installation methods or ensure site conditions, no warranties, expressed or implied, are intended regarding the products' actual performance. We do not accept liability for any loss, damage, or injury from using this information. Please take a look at the test reports displayed on a relevant AGNI-System webpage for all compliance specifics.

Date 07.03.2025