FIRESTOP CENTRE

Authorised New Zealand Distributor Ph (09) 483 4000 www.firestopcentre.co.nz

Step-by-step installation instructions:

- 1. Ensure the aperture is free from dust and debris.
- 2. Apply AGNI-Black in the annular gap between the wall and the pipe, 26mm (depth of lining) into the aperture.

3. Finish AGNI-Black flush with the wall.

AGNI-Black in 2 x 13mm Plasterboard Wall or 116mm Concrete/Masonry/Block Wall Polybutylene Pipe 15-28mm Max FRR -/120/120

System ID# FC435

Technical Information	
Substrate	 Min. 64mm timber or steel stud wall with a minimum of two layers of 13mm (or greater) FR plasterboard on each side, with or without insulation. Min. 116mm concrete wall
Service range	DN15mm up to DN28mm PB pipes
Annular gap	6 - 17mm
AGNI-Products	AGNI-Black
Protection installation	From both sides of the wall


Compliance Information	
Standards	AS1530.4-2014, AS4072.1-2005
FRR/FRL	-/120/120 (with or without insulation)
Reference	PF24101




8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au

Disclaimer

Agnitek reserves the right to modify product specifications without prior notice due to its ongoing research, development & certification programme. The information in this document is provided in good faith and is intended for guidance purposes only. Any accompanying drawings are solely for illustrative purposes. Since Agnitek cannot oversee installation methods or ensure site conditions, no warranties, expressed or implied, are intended regarding the products' actual performance. We do not accept liability for any loss, damage, or injury from using this information. Please take a look at the test reports displayed on a relevant AGNI-System webpage for all compliance specifics.

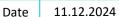

Page 1 of 2

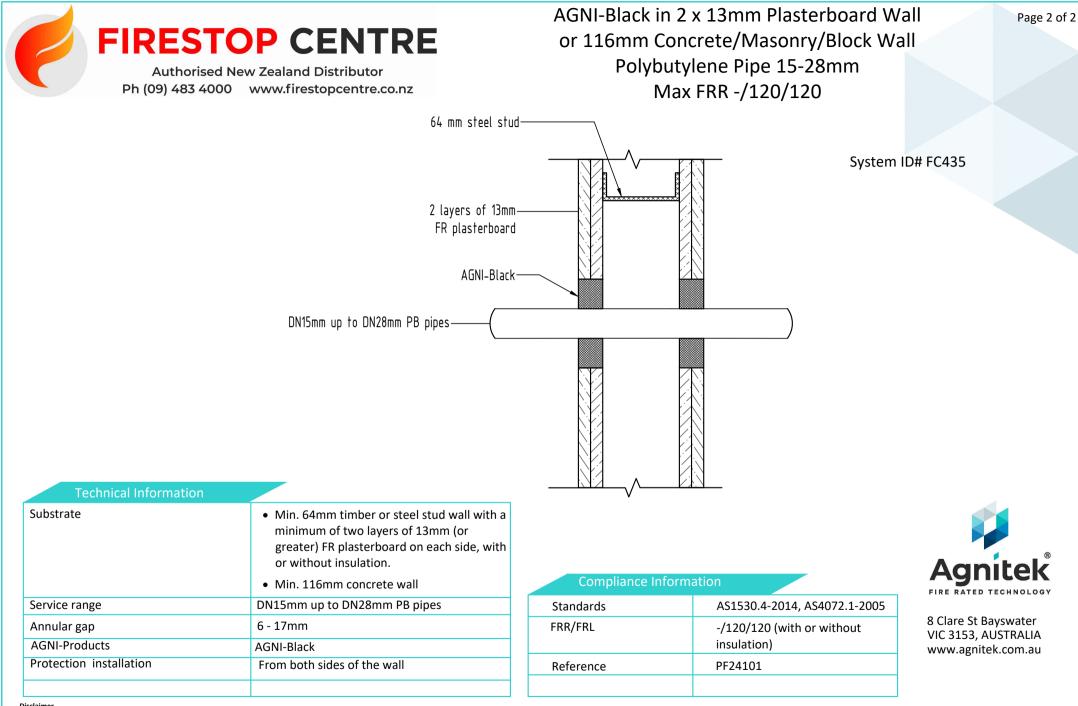

Disclaimer

Agnitek reserves the right to modify product specifications without prior notice due to its ongoing research, development & certification programme. The information in this document is provided in good faith and is intended for guidance purposes only. Any accompanying drawings are solely for illustrative purposes. Since Agnitek cannot oversee installation methods or ensure site conditions, no warranties, expressed or implied, are intended regarding the products' actual performance. We do not accept liability for any loss, damage, or injury from using this information. Please take a look at the test reports displayed on a relevant AGNI-System webpage for all compliance specifics.

12.12.2024 Date