FIRESTOP CENTRE

Authorised New Zealand Distributor Ph (09) 483 4000 www.firestopcentre.co.nz

Step-by-step installation instructions:

1. Ensure the aperture is free from dust and debris.

Unexposed side:

2. Apply AGNI-Seal to the annular gap between the service and plywood to the full depth and finish flush with the plywood's face.

Exposed side:

- 3. Make one revolution of AGNI-Wrap 50 around the pipe and insert 25mm of the wrap into the aperture leaving another 25mm of the wrap below the lining
- 4. Secure AGNI-Wrap 50 with AGNI-Strap at the centre of the exposed wrap.
- 5. Use two AGNI-Clips to secure AGNI-Wrap 50 to the lining.
- 6. Apply a bead of AGNI-Seal between the lining and AGNI-Wrap 50

AGNI-Wrap in 16mm Plasterboard Ceiling	5
PEX Pipes 16mm - 40mm	
FRR -/60/60	

System ID# FC838



Technical Information		
Substrate	• Fire-rated plasterboard ceiling (one layer of 16mm)	C
		Standa
Service range	DN 16mm - 40mm PEX pipes	FRR/FR
Annular gap	2.5mm - 7.8mm	Refere
AGNI-Products	AGNI-Seal, AGNI-Wrap 50, AGNI-Strap, AGNI-Clips	
Protection installation	Asymmetrical	

Compliance Information


Standards	AS1530.4-2014, AS4072.1-2005
FRR/FRL	-/60/60
Reference	RIRF24080 (Fire 90)



8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au

Page 1 of 2

Agnitek reserves the right to modify product specifications without prior notice due to its ongoing research, development & certification programme. The information in this document is provided in good faith and is intended for guidance purposes only. Any accompanying drawings are solely for illustrative purposes. Since Agnitek cannot oversee installation methods or ensure site conditions, no warranties, expressed or implied, are intended regarding the products' actual performance. We do not accept liability for any loss of Agnitek cannot oversee installation are relevant AGNLSystem webnage for all compliance specifics.

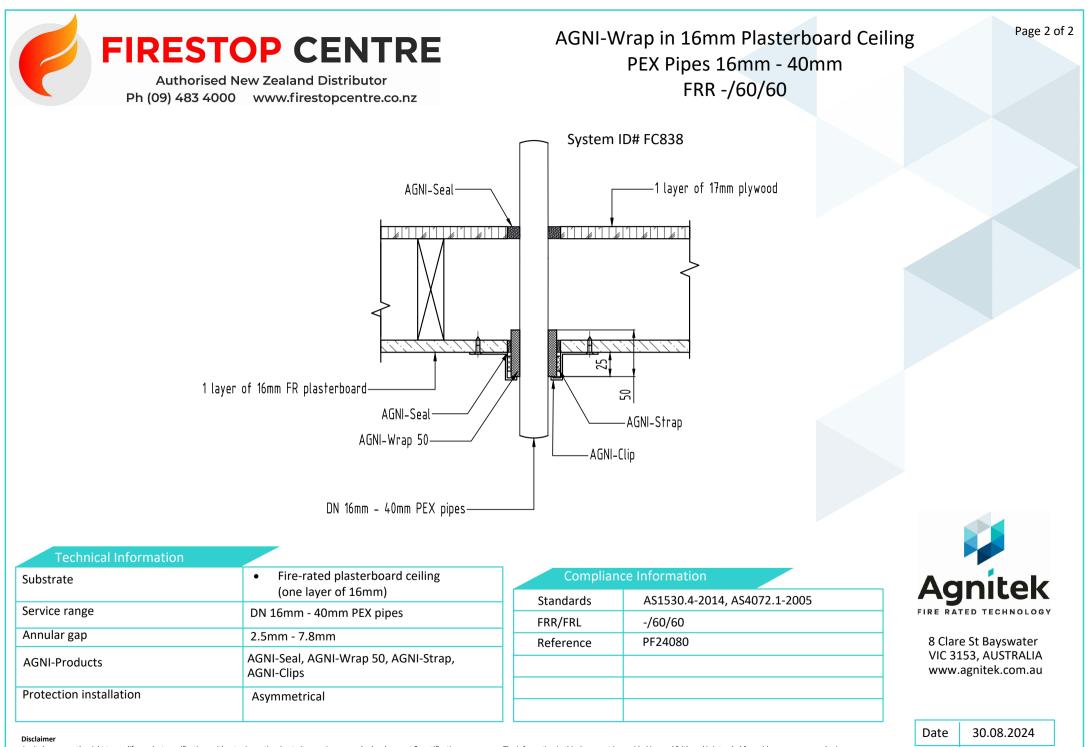

Agnitek reserves the right to modify product specifications without prior notice due to its ongoing research, development & certification programme. The information in this document is provided in good faith and is intended for guidance purposes only. Any accompanying drawings are solely for illustrative purposes. Since Agnitek cannot oversee installation methods or ensure site conditions, no warranties, expressed or implied, are intended regarding the products' actual performance. We do not accept liability for any expressed intended regarding the products' actual performance. We do not accept liability for any expressed intended regarding the products' actual performance. We do not accept liability for