

FIRESTOP CENTRE


Authorised New Zealand Distributor
Ph (09) 483 4000 www.firestopcentre.co.nz

AGNI-Shield in 1 x 13mm Plasterboard Wall or 116mm Concrete Wall Steel Pipe 50mm FRR -/60/60

System ID# FC826

Step-by-step installation instructions:

- 1. Ensure the aperture(s) is free from dust and debris.
- 2. Make a 20mm x 20mm AGNI-Seal cone around the pipe.
- 3. Make one revolution of 150mm AGNI-Shield around the pipe.
- 4. Fix AGNI-Shield with AGNI-Strap placed in the centre of this AGNI-Shield.

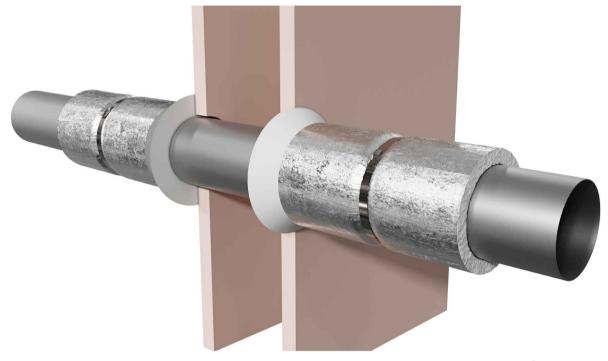

hnical		

Technical information	
Substrate	 Min. 90mm timber or steel stud wall with a minimum of one layer of 13mm (or greater) FR plasterboard on each side, with or without insulation.
	Min. 116 mm concrete wall
Service range	DN 60mm steel pipe
Annular gap	2mm - 8mm
AGNI-Products	AGNI-Shield, AGNI-Strap, AGNI-Seal
Protection installation	From both sides of the wall

	liance		
- I ama	lanca	Intorm	NATION

Standards	AS1530.4-2014, AS4072.1-2005	
FRR/FRL	-/60/60	
Reference	RIRF24078 (F-AP-081)	



8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au

Date

01.08.2024


Disclaime



FIRESTOP CENTRE

Authorised New Zealand Distributor
Ph (09) 483 4000 www.firestopcentre.co.nz

AGNI-Shield in 1 x 13mm Plasterboard Wall or 116mm Concrete Wall Steel Pipe 50mm FRR -/60/60

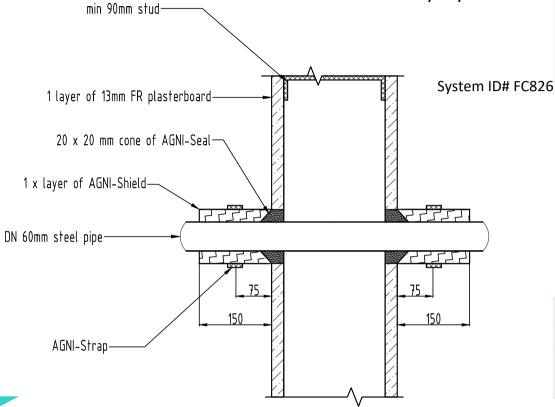

Technical Information

Substrate	 Min. 90mm timber or steel stud wall with a minimum of one layer of 13mm (or greater) FR plasterboard on each side, with or without insulation. Min. 116 mm concrete wall 	
Service range	DN 60mm steel pipe	
Annular gap	2mm - 8mm	
AGNI-Products	AGNI-Shield, AGNI-Strap, AGNI-Seal	
Protection installation	From both sides of the wall	

Compliance Information

Standards	AS1530.4-2014, AS4072.1-2005
FRR/FRL	-/60/60
Reference	PF24078



8 Clare St Bayswater VIC 3153, AUSTRALIA www.agnitek.com.au

Date

01.08.2024